## DB9-F Cable (Host) to RJ-45 RS-232 (Console) Booster

ASM-600-A4 is 15cm DB9-F (RS-232) to RJ-45 Booster. ASM-600-A4 can Line extend 30M (15M RS-232+15M RJ-45) (Max-Total length) the signal of PC' RS-232; ASM-600-A4 use 2 pcs LED to show the Power /TXD /RXD Single.

Standard RS-232 DCE (DB9-F) to DTE (RJ-45) Interface

With DB9-F & RJ-45 Connectors / Easy to install, Plug & Play


Working type: RS-232 (DB9-F) (DCE) to Host =>Booster=>RS-232 (RJ-45) (DTE) to Console Fully compliant with RS-232 Spec./ With Red/Green colors LED appeared power / TXD / RXD Data rate: Up to 921 K bps

Housing: Plastic / Weight: 65g / Dimensions (L\*W\*H) : 45 \* 48 \* 24 ( mm )

Pin assignment:

RS-232 Signal Name	DB9-F (DCE Mode)	RJ-45	
CTS (Clear To Send)	7 <b>&lt;= IN</b>	1	CTS
DSR (Data Set Ready)	4<= IN	2	DSR
RD (Receive Data)	3<= IN	3	RXD
SG (Signal Ground)	5	4	GND
SG (Signal Ground)	5	5	GND
TD (Transmit Data)	2=> OUT	6	TXD
DTR (Data Terminal Ready)	6=> OUT	7	DTR
RTS (Request To Send)	8=> OUT	8	RTS
FG (Frame Ground)*	Shell	Shell	FG (Frame Ground)*

Connection:

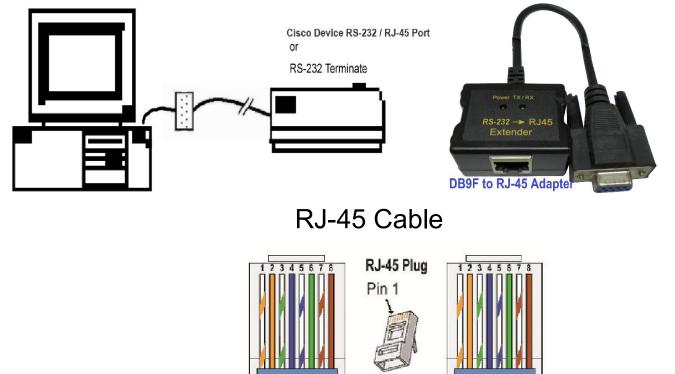

Clip is pointed away from you. o O g B b G br BR

-568B

o O a B b G br BF

-568B