

RJ-45 RS-232 (Host) to DB9-M Cable (Console) Adapter

ASM-600-B2 is RJ-45 (RS-232) to 15cm DB9-M (RS-232) Cable Adapter. ASM-600-B2 can Line extend 15M (Max-Total length) the signal of PC' RS-232; ASM-600-B2 use 2 pcs LED to show the Power /TXD /RXD Single. Your Console must is DB9-M (DCE Mode) RS-232 interface – Host Adapter please purchase an adapter cable or adapter for installation.

Standard RS-232 DCE (RJ-45) to DTE Interface (DB9-M) Cable

With DB9-M & RJ-45 Connectors / Easy to install, Plug & Play

Working type: RS-232 (RJ-45) (DCE) to Host =>RS-232 (DB9-M) (DTE) to Console

Fully compliant with RS-232 Spec./ With Red/Green colors LED appeared power / TXD / RXD


Data rate: Up to 921 K bps

Housing: Plastic / Weight: 65g / Dimensions (L*W*H) : 45 * 48 * 24 (mm)

Pin assignment:

RS-232 Signal Name	DB9-M (DTE Mode)	RJ-45	
CTS (Clear To Send)	8 <= IN	1	CTS
DSR (Data Set Ready)	6 <= IN	2	DSR
RD (Receive Data)	2 <= IN	3	RXD
SG (Signal Ground)	5	4	GND
SG (Signal Ground)	5	5	GND
TD (Transmit Data)	3 => OUT	6	TXD
DTR (Data Terminal Ready)	4 => OUT	7	DTR
RTS (Request To Send)	7 => OUT	8	RTS
FG (Frame Ground)*	Shell	Shell	FG (Frame Ground)*

Connection:

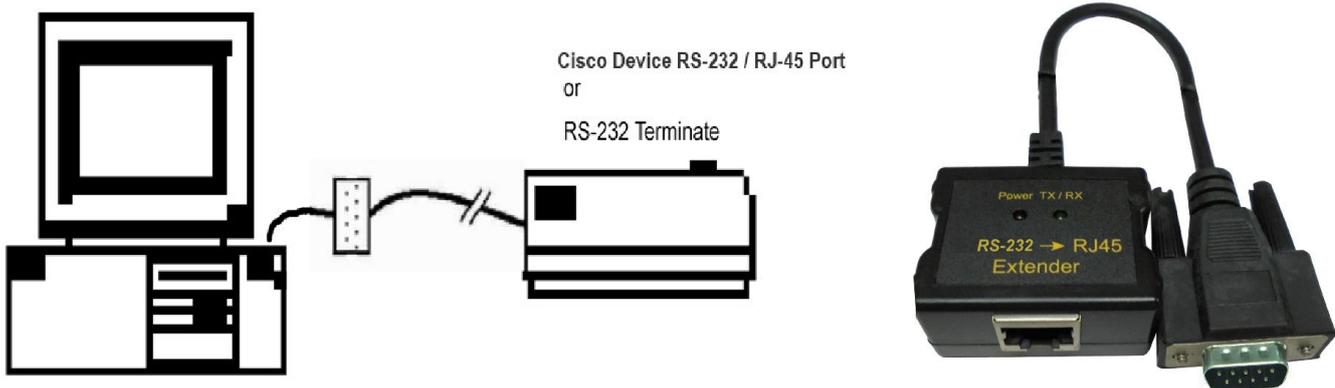

Host Adapter (DB-9F or USB) Option

RJ-45 Cable

