


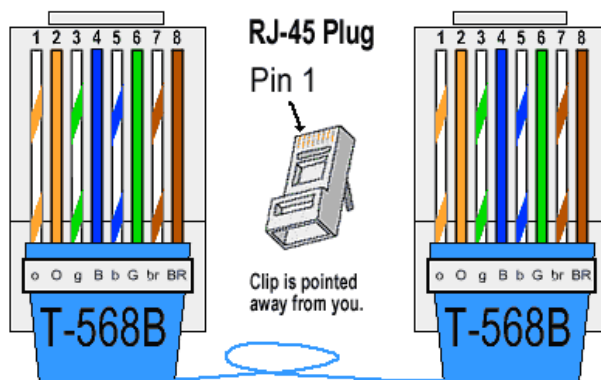
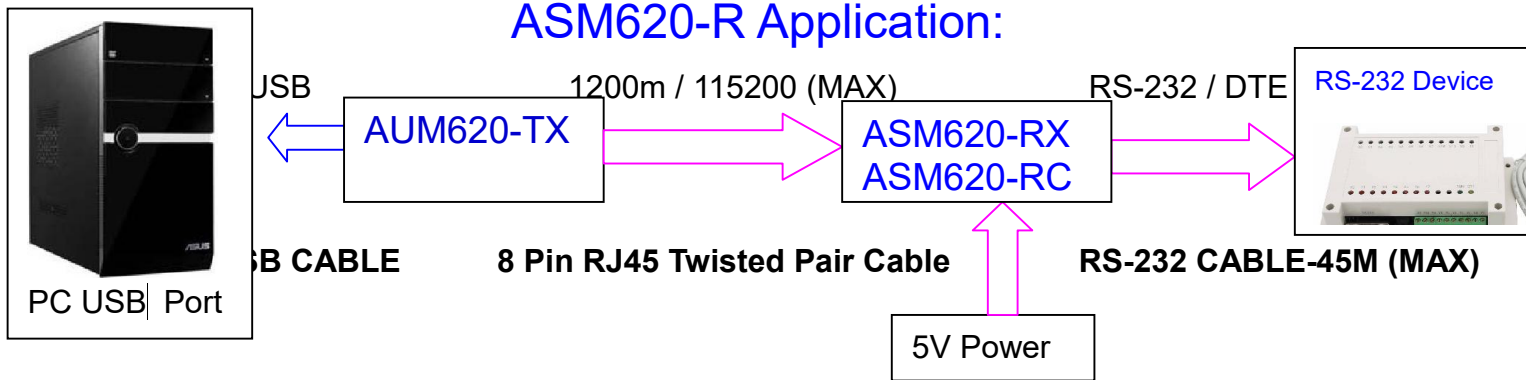


# AUM-620 (USB to RS-232 Converter)

The AUM620 is a USB to RJ-45 =>RS-422=>RJ-45 to RS-232 Converter (DTE Mode to Device)  
 The RJ45/RS-422 must connect AUM620-T or ASM620-T to Host  
 RJ45 w/TXD+/TXD-; RXD+/RXD-; CTSD+/CTSD-; RTSD+/RTSD- Singles  
 The ASM620-R with 120 Ohm terminate resister \*2 (TO RX & CTS).  
 You can easy connect PC or PLCC RS-422 interface to AUM620 and connect to Device RS-232 port.  
 AUM620-R convert 4 Twisted Pair to RS-232 TXD/RXD/CTS/RTS Singles  
 ASM620-R connector to Device (RS-232 Out is DTE Mode)  
**With TXD-RXD LED Display data transfer / Power: AUM-620-TX Power Free / ASM-620-R: DC5V**  
**Adapter / Data rate : Over 115,200 bps /**  
**ESD Protection for RS-232 I/O' +-15KV**

AUM620-TX	ASM620-RX	ASM620-RC
		
<b>Model: AUM-620 (TX+RX) / AUM-620-A (TX+RC)</b>		

## ASM620-R Application:



**RJ45 Singles: 1. RTS+ ;2.RTS- ;3.RX+ ;4.TX- ;5.TX+ ;6.RX- ;7.CTS+ ;8.CTS-**